



Fzone Music Technology Co.,Ltd

www.fzonetechnology.com

Chromatic/Guitar/ Bass/Violin/UkuleleTuner

FT-2001


User's Manual

Thank you very much for purchasing FZONE Bicolor multifunctional Clip Tuner FT-2001 . Please read this manual carefully to make sure that you use it correctly. Please keep it for future reference.

FEATURES

- *Clip-on multifunctional tuner that attaches directly to a wind instrument or string instrument.
- *Internal backlight and the LCD screen ensures excellent visibility even on a dim surrounding.
- *3 needles points to the middle and LCD screen turn from White to green when it's in tune.
- *Auto Power offer function maximizes the battery life, even if you forget to turn the unit off.
- *One piece of 3V CR2032 battery can be installed easily.

APPEARANCE AND SKETCH

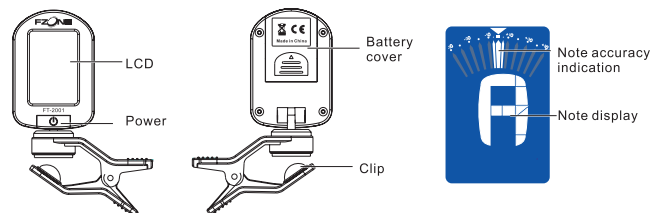

TURN ON/OFF

When use this unit for the first time, it will be in tuner function when the LCD lights. Then the A4=440 and no flat tuning.

1:key-press instruction

(1)turn on/off power

- Turn on :Press Power key at the power off condition, the LCD will be lighted and the unit enters the tuner function automatically . The note accuracy indication needle is at the left and waits for tuning.
- Turn off:① Press Power key at the power on condition, and then the backlight is off .

尺寸：95*190MM
材质：80g速写纸
正反面印

c.If no operation or no signal is detected for one minutes, it will turn off automatically.

(2) Mode change: to press power key one second for changing.
Chromatic→Guitar→Bass→Violin→Ukulele

TUNING

- (1)Please clip the tuner onto the proper position of the instrument you wish to tune, and turn the slip for easy observation.
- (2)When the tuner detects the tone and do a judgement automatically, it will show the corresponding note name and the warp of the tone.
- (3)According to the sense of pitch showed by the tuner, it will do a estimation to the result and adjust the pitch of the instrument.
 - a. When the note name and string number are the same as the correct ones, and the "note accuracy indication needle"points to the middle of the meter, which means that the pitch is in tune.
 - b. When the note name and string number are the same as the correct ones, but the "note accuracy indication needle"points to the right part of the meter, then the pitch is higher than the standard pitch, so please adjust the instrument to make a bit lower pitch until it is in tune; on the contrary, if the "note accuracy indication needle"points to the left part of the meter, then the pitch is lower than the standard pitch, so please adjust the instrument to make a little bit higher pitch until it is in tune .

SPECIFICATIONS

- 1.Tuning mode: Chromatic/Guitar/Bass/Violin/Ukulele
2. Tuning range: B0--B7
3. A4 calibration: 440Hz
4. Tuning way: clip tuning automatically
5. Tolerance: ± 1 cents
6. Power: 3V CR2032 battery (one piece)

REPLACING THE BATTERY

Please pay attention to the positive and negative of the battery, when open the battery cover and put in a CR 20302 battery. If there are some phenomenons like system halted and no use to the power key, please take out the battery and re-put in and then the problems will be solved.



Fzone Music Technology Co.,Ltd

www.fzonetechnology.com